

# Windows 8

Navigation icons: A (Start button), B (Speaker icon), C (Volume Mixer), D (Sound Control Panel).

Navigation icon: A (Start button).

Navigation icon: B (Speaker icon).

Navigation icon: C (Volume Mixer).

Navigation icon: D (Sound Control Panel).

Navigation icon: E (Microphone Properties dialog).

# Windows 7/Vista

Navigation icon: A (Speaker icon).

Navigation icon: B (Volume Mixer).

Navigation icon: C (Sound Control Panel).

Navigation icon: D (Microphone Properties dialog).

Navigation icon: E (Microphone Properties dialog).

## Frequently Asked Questions

<http://www.trust.com/17003/faq>



# WEBCAM

for PC & laptop

EXIS

Quick Installation Guide



